

**TOYOTA LANDCRUISER Models HZJ76, HZJ78 & HZJ79**

<b>DESCRIPTION</b>	<b>PART NUMBER</b>	<b>UNIT</b>	<b>QTY</b>
Absorber Shocks FR	48511-69645	Pc	1
Absorber Shocks FR	48511-69685	Pc	1
Absorber Shocks FR	48511-69675	Pc	1
Absorber Shocks RR	48531-69645	Pc	1
Absorber Shocks RR	48531-69885	Pc	1
Absorber Shocks RR	48531-69855	Pc	1
Adjuster Lever RR Brake-LH	47644-60010	Pc	1
Adjuster Lever RR Brake-RH	47643-60010	Pc	1
Air Element	17801-61030	Pc	1
Alternator Assy	27060-17220	Pc	1
Arm Assy Windshield Wiper	85221-60101	Pc	1
Arm -FR Wiper RH	85211-60091	Pc	1
Arm-RR Bumper	52181-60010	Pc	1
Axle Wheel Bearings Inner	90368-49084	Pc	1
Axle Wheel Bearings Outer	90368-45087	Pc	1
Band Sub Assy	77601-60261	Pc	1
Bar Sub Assy RR Bumper LH	52069-60081	Pc	1
Bar Sub Assy RR Bumper LH	52069-60022	Pc	1
Bar Sub Assy RR Bumper RH	52019-60022	Pc	1
Bar,RR Bumper	52151-60080	Pc	1
Bearing For Out Put Shaft Rear	90363-30075	Pc	1
Bearing - Connecting Rod	13041-17011-02	Pc	1
Bearing - Input Shaft FR	90363-40050	Pc	1
Bearing Assy Clutch Release	31230-60201	Pc	1
Bearing Ball -Clutch Release Hub	90363-52001	Pc	1
Bearing -Counter 5th Gear	90364-30009	Pc	1
Bearing Needle Roller-1st Counter Gear	90365-25019	Pc	1
Bearing -Alternator Rotor	90099-10140	Pc	1
Bearing Input Shaft	90363-12010	Pc	1
Bearing Input Shaft	90364-25012 / 90364-T0019	Pc	1
Bearing Needle	90364-33011	Pc	1
Bearing -RR Drive Pinion FR	90366-33006	Pc	1
Bearing -RR Drive Pinion RR	90366-40111	Pc	1
Bearing Set - Camshaft	11801-17010	Pc	1
Bearing Tapered Roller For RR Drive Pinion FR	90366-30071	Pc	1
Bearing Tapered Roller For RR Drive Pinion FR	90366-30067	Pc	1
Bearing Tapered Roller For RR Drive Pinion RR	90366-40088	Pc	1
Bearing Tapered Roller For RR Drive Pinion RR	90366-35087	Pc	1
BearingSet -Crank Shaft	11705-17011	Pc	1
Belt Set V - Fan & Alternator	90916-02452	Set	1
Blade Assy Rear Wiper	85242-60012	Pc	1
Blade FR Wiper RH	85222-60062	Pc	1
Blade FR Wiper LH	85212-60032	Pc	1
Bolt	90119-12088	Pc	1
Bolt- (for RR Axle RH)	90942-02083	Pc	1
Bolt- (Idle pully)	88446-60030	Pc	1
Bolt- (set for brake drum)	90113-10003	Pc	1

Bolt Hexagon -RR Spring Cilp Set	48256-25050	Pc	1
Bearing	90366-17007	Pc	1
Bolt NO.1 -Differential Carrier Set	90116-08233	Pc	1
Bolt NO.1 -RR Differential Carrier Set	90116-08329	Pc	1
Bolt RR Spring, Center	48247-36200	Pc	1
Bolt RR Spring, Center	48289-60010	Pc	1
Bolt RR Spring, Center	48247-36720	Pc	1
Bolt -Serration	90114-10061	Pc	1
Bolt -Serration	90114-11003	Pc	1
Bolt Stud For Steering Set	90126-12005	Pc	1
Bolt -W/Washer	90119-10765	Pc	1
Bolt -Washer Based	90105-10424	Pc	1
Bushing-(Insulator Mounting FR)	12361-17091	Pc	1
Bracket Assy -Steering Column Upper	45280-60381	Pc	1
Bracket Assy, Fr Bumper	52130-60100	Pc	1
Bracket Assy, Fr Bumper	52140-60100	Pc	1
Bracket Radiator - (Reserve Tank)	16611-17011	Pc	1
Bracket Rr Bumper -LHS	52174-60100	Pc	1
Bracket Rr Bumper -RHS	52185-60040	Pc	1
Bracket Stablizer -RR Bar	48829-60070	Pc	1
Bracket Stablizer -RR End	48824-60120	Pc	1
Bracket,RR Bamper	52168-60010	Pc	1
Bracket,RR Bamper S1	52185-60060	Pc	1
Brake Adjuster LH	47062-60011	Pc	1
Brake Adjuster RH	47061-60011	Pc	1
Cylinder Assy Disc Brake RH	47730-60120	Pc	1
Bulb	90981-13046	Pc	1
Bulb	90981-13044	Pc	1
Bulb	90981-15011	Pc	1
Bulb	90981-11059	Pc	1
Bulb	90981-11004	Pc	1
Bulb	90981-15021	Pc	1
Bulb - Head Lamp NO.1	90981-13058	Pc	1
Bulb 12V 21W 5W -Double Filerment	99132-21210-75	Pc	1
Bulb 12V,60 W 55 W	90981-22004 / 90981-13058	Pc	1
Bulb 12V 21W Single Contact	99132-11210	Pc	1
Bulbs12V,60/55W	H4 12342 PRC1	Pc	1
Bulb HID -Discharge HeadLamp	90981-20005	Pc	1
Belt Assy FR Seat InnerLH	73240-60281-B1	Pc	1
Bumper FR Spring - RH	48304-60110	Pc	1
Bumper Sub Assy RR Spring	48306-60160	Pc	1
Belt Assy FR Seat InnerLH	73230-60231-B2	Pc	1
Bumper Rear Steel	52019-60081	Pc	1
Bumper Sub-Assy, RR	52107-60113	Pc	1
Bumper Sub-Assy, RR	52106-60143	Pc	1
Bumper Sub-Assy, RR Side,R	52108-60060	Pc	1
Bumper sub-Assy,RR	52109-60061	Pc	1
Bush -FR Lateral Control Rod	48706-60070	Pc	1
Bush -Lateral Control Rod	48706-60050	Pc	1
Bush Leading Arm NO.2 (4 Pcs)	48702-60050	Pc	1

Bush -Leaf Spring RR Shackle Lower (8 Pcs)	90385-18021	Pc	1
Bush -Leaf Spring RR Shackle upper (4 Pcs)	90385-18022	Pc	1
Bush -LWR Arm (2 Pcs)	48061-60050	Pc	1
Bush -LWR Arm (2 Pcs)	48061-60010	Pc	1
Bush -RR Spring	90389-22003	Pc	1
Bush -RR Spring Pin	90389-14056	Pc	1
Bush Stabilizer Fr Bar NO.1	48815-26020	Pc	1
Bush Stabilizer Fr Bar NO.1	48815-60040	Pc	1
Bush -Stablizer Bar FR NO.1	48815-60170	Pc	1
Bush -Stablizer Link FR	90385-13009	Pc	1
Bush -Stablizer Link RR	90385-11021	Pc	1
Bush -Stablizer RR (HZJ -76)	48815-60210	Pc	1
Bush -Steering Knuckle	90381-35001	Pc	1
Bush Sub Assy	48706-60030	Pc	1
Bushes RR -Shock Absorber	90385-19003	Pc	1
Cable Assy Hood Lock Control	53630-60190	Pc	1
Bush Stabilizer Fr Bar NO.1	48815-26040	Pc	1
Cable Assy Hood Lock Control	53630-90K02	Pc	1
Cable -Seat Control Back	72210-90K02	Pc	1
Cable -Seat Control Back	72570-90K01	Pc	1
Cable Sub Assy (Spiral cable)	84306-60120	Pc	1
Cable Sub Assy (Spiral cable)	84306-52100	Pc	1
Cap Assy Fuel	23380-17491	Pc	1
Cap Assy Fuel	23380-17471	Pc	1
Cap Assy Fuel Filter	23380-17531	Pc	1
Cap FR Axle Outer Shaft Flange (Grease Caps)	43423-35010	Pc	1
Cap -Fuel tank	77300-35010	Pc	1
Cap Sub Assy - Radiator	16401-67150		1
Cap Sub Assy- Vane Pump Oil Reservoir	44305-22061	Pc	1
Carpet Assy,RR	58510-6B493-A1	Pc	1
Carrier Assy Differencial FR	41110-60830	Pc	1
Carrier Sub Assy	74403-60240	Pc	1
Carrier Sub Assy -Battery	74403-60160	Pc	1
Case - Fuel Filter	23382-51020	Pc	1
Case RR Spring Clip Bolt	48246-36052	Pc	1
Case Sub Assy -Timing Gear	11301-17030	Pc	1
Clamp Sub Assy,Battery Hold Down	74404-60140	Pc	1
Cleaner Assy Air	17700-17360	Pc	1
Clip Hose	96136-54801	Pc	1
Clip -Release Bearing Hub	31232-36020	Pc	1
Clip Side Window NO.2	62375-90K00-B0	Pc	1
Clock Assy	83910-60230	Pc	1
Clutch Assy,Magnet	88410-6A050	Pc	1
Clutch Disc	31250-60286	Pc	1
Coil Spring	48231-60840		1
Compressor Assy -Cooler	88320-37080	Pc	1
Compressor Assy -Cooler	88320-6A230	Pc	1
Compressor Assy -Cooler	88320-60700	Pc	1
Computer 4 Wheel Drive Control	89533-60080	Pc	1
Condensor Assy -Cooler	88460-60460	Pc	1

Cooler Assy -Oil	15710-17021	pc	1
Cover Assy Clutch	31210-60300	Pc	1
Cover Assy -Clutch -(Pressure plate)	31210-36330	Pc	1
Cover -Bumper FR	52119-60986	Pc	1
Cover -Bumper RR	52159-60914	Pc	1
Cover FR Bumper	52119-60830	Pc	1
Cover -FR Stabilizer Bracket	48823-60030	Pc	1
Cover -Reclining Adjuster RH	71811-60040-B0	Pc	1
Cover Sub Assy, Free Wheel Hub	43509-60051	Pc	1
Cup Kit -RR Wheel Cylinder	04906-35130	Kit	1
Cup Shoe Hold Down RR Brake	47449-30020	Pc	1
Cup Sub Assy -Dust	17703-17010	Pc	1
Cushion -Exhaust Mounting	17567-17020	Pc	1
Cushion -Fr Stabilizer	48817-30020	Pc	1
Cushion -Stabilizer For RR	48817-30010	Pc	1
Cable Assy Hood Lock Control	53630-60130	Pc	1
Cushions Fr Shock Absorber NO. 1	90948-01004	Pc	1
Cylinder & Key Set	69059-60160	Pc	1
Cylinder & Key Set - Ignition Switch Lock	69057-60211	Pc	1
Cylinder & Key Set Ignition Switch Lock	69057-60371	Pc	1
Cylinder & Key Set -Lock	69005-60B10	Pc	1
Cylinder & Key Set -Lock	69005-6B553	Pc	1
Cylinder Assy -Clutch Master	31401-60060	Pc	1
Cylinder Assy -Clutch Master	31420-60050	Pc	1
Cylinder Assy -Clutch Master	31410-60432	Pc	1
Cylinder Assy -Clutch Release	31470-60290	Pc	1
Cylinder Assy -Master Brake Cyl	47201-60A00	Pc	1
Cylinder Assy -RR Wheel Brake RH	47550-60120	Pc	1
Carpet Assy,RR	58570-60420-A1	Pc	1
Cylinder Head Complete	11101-17050	Pc	1
Cylinder Head Gasket	11115-17010-05	Pc	1
Cylinder Kit -Brake Master	04493-60300	Pc	1
Cylinder Set Lock	69005-6C580	Pc	1
Cylinder Kit -Clutch Release	04313-28020	Pc	1
Cylinder Kit -Disc Brake FR	04479-60070	Kit	1
Cylinder Kit Disc -Brake RR	04479-60030	Kit	1
Cylinder Kit Rr	04479-60081	Kit	1
Cylinder Kit -RR Wheel	04474-35100	Pc	1
Cylinder kit,clutch master	04311-60100	Pc	1
Cylinder Sub Assy -Brake Master	47201-60600	Pc	1
Dam Back Window Glass Adhesive	56117-64010	Pc	1
Dam Window Glass Adhesive	56117-60080	Pc	1
Damper Assy -Steering	45700-69165	Pc	1
Damper Assy -Steering	45700-69175	Pc	1
Disc	31250-60481	Pc	1
Disc Assy Clutch	31250-60471	Pc	1
Disc Assy Clutch -(Clutch Plate) HZJ7	31250-60431	Pc	1
Disc -Front (FZJ & HDJ )	43512-60141	Pc	1
Drum Sub Assy -RR Brake	42431-60250	Pc	1
Dryer -Cooler	88474-17010	Pc	1

Duct Cool Air Intake NO. 2	53285-60041	Pc	1
Duct, Cool Air	53299-60190	Pc	1
Duct Cool Air Intake NO. 2	53285-60090	pC	1
Element Assy Fuel	23390-51070 / 23390-51020	Pc	1
Element Assy -Fuel Filter Primary	04234-68010	Pc	1
Element Assy-Fuel Filter	23390-64480	Pc	1
End Sub Assy	45047-69085	Pc	1
End Sub Assy	45044-69145	Pc	1
End Sub Assy	45045-69075	Pc	1
End Sub Assy Tie Rod	45046-69135	Pc	1
Engine Assy	19000-17680 / 17000-17681	Pc	1
Engine Wiring harness transmission	82121-60C10	Pc	1
Evaporator Assy Sub	88501-60392	Pc	1
Element Air Refiner	87139-52020	Pc	1
Extension Sub Assy	52108-60040	Pc	1
Extension Sub Assy LH	52107-60141	Pc	1
Extension Sub Assy	52107-60102	Pc	1
Extension Sub-Assy	52106-60171	Pc	1
Extension Sub-Assy	52106-60132	Pc	1
Fan	16361-17030	Pc	1
Fender Sub Assy FR	53801-60B40	Pc	1
Filter Air	88568-60060	Pc	1
Filter Sub Assy	77023-26010	Pc	1
Filter Sub Assy -Fuel Suction Tube	22390-6A511	Pc	1
Fitting Clips for front pads	04947-60090	Pc	1
Flange FR Axle	43421-60022	Pc	1
Flange Fr Axle	43421-60060	Pc	1
Flange Sub Assy	41204-35100	Pc	1
Flange Sub Assy	41204-60050	Pc	1
Flange Sub Assy RR Drive Pinion Companion	41204-60060	Pc	1
Flasher Assy Turn	81980-32010	Pc	1
Flasher Assy Turn Signal	81980-60010	Pc	1
Filter -Water Separator	1 457 434 025	Pc	1
Fluid Coupling	16210-17070	Pc	1
Fork Sub Assy	31204-36050 /31204-26010	Pc	1
Flange Sub Assy	41204-35082	Pc	1
Fuel Filter	23303-64010	Pc	1
Fork Sub Assy	31204-35050	Pc	1
Fuse 12V 1 AM	8JS711683-011	Pc	1
Fuse 2 AM	8JS728596-081	Pc	1
Fuse Mini 7-5 AM	8JS728596-111	Pc	1
Fuse Ato 10 AM	8JS711686-002	Pc	1
Fuse Ato 15 AM	8JS711687-002	Pc	1
Fuse Ato 20 AM	8JS711688-002	Pc	1
Fuse Ato 25 AM	8JS711689-002	Pc	1
Fuse Ato 30 AM	8JS711690-002	Pc	1
Fuse Ato 4 AM	8JS711683-052	Pc	1
Fuse Ato 5 AM	8JS711684-002	Pc	1
Flange FR Axle Outer Shaft RH	43421-60060	Pc	1
Fuse Mini 10 AM	8JS728596-141	Pc	1

Fuse Mini 15 AM	8JS728596-151	Pc	1
Fuse Mini 3 AM	8JS728596-101	Pc	1
Fuse 3 AM	8JS711683-002	Pc	1
Fuse Mini 4 AM	8JS728596-121	Pc	1
Fuse Mini 5 AM	8JS728596-131	Pc	1
Gage Assy Fuel	83320-69335	Pc	1
Gasket	90430-12031	Pc	1
Gasket-Knuckle Spindle Oil Retainer	43436-60011	Pc	1
Gasket Cylinder Head	11115-170100-05	Pc	1
Gasket Delivery Valve	22149-56351	Pc	1
Gasket -FR Axle	43422-60070	Pc	1
Gasket Injector Nozzle	11177-54020	Pc	1
Gasket Kit	04446-60070	Kit	1
Gasket Kit	04434-60080	Pc	1
Gasket Kit -Engine Overhaul	04111-17110	Kit	1
Gasket Kit Manuel Transmission Overhaul	04331-60250		1
Gasket Kit Power Steering Gear -Recirculating Ball	04445-60070	Pc	1
Gasket Kit -RR Differential Carrier	04412-60190	Kit	1
Gage Assy Fuel	83320-69535	Pc	1
Gasket For Extension Housing Plug No. 1	12157-10010	Pc	1
Gasket -Transfer Case FR	33142-60050	Pc	1
Gaskets - Oil Pump	15193-17010	Pc	1
Gate Assy RR Body	65700-90K03	Pc	1
Gauge Assy- Fuel Sender	83320-69475	Pc	1
Gauge Assy- Fuel Sender	83320-69355	Pc	1
Gear Assy Power Steering	44110-60440	Pc	1
Gear Box HubTransmission Clutch No. 1	33361-71020 /33361-60050	Pc	1
Gear Box Bearing Counter Shaft Center	90365-34005	Pc	1
Gear Box Bearing Needle Roller -1st Gear	90364-39005	Pc	1
Gear Box Bearing Needle Roller -2nd Gear HZJ	90364-47003	Pc	1
Gear Box Bearing Needle Roller -3rd Gear HZJ	90364-38011	Pc	1
Gear Box Hub Transmission clutch No.2	33362-60030	Pc	1
Gear Box Hub Transmisson Clutch	33362-35030	Pc	1
Gear Box Key Sycroniser Shifting No.2	33366-35060	Pc	1
Gear Box Key SYNCHROMESH	33394-60020	Pc	1
Gear Box Bearing set - CrankShaft ( U/S 0.25 )	11704-17011	Set	1
Gear Box Key SYNCHROMESH	33394-35030	Pc	1
Gear Box Key Synchromesh Shifting No. 1	33365-35060	Pc	1
Gear Box Ring Set	33037-60040	Pc	1
Gear Box Ring Set Synchronizer No.1 HZJ	33037-60050	Pc	1
Gear Box Ring Shaft Snap	90520-30017	Pc	1
Gear Box Ring shaft snap	90520-30015	Pc	1
Gear Box Ring shaft snap	90520-30016	Pc	1
Gear Box Key Synchromesh Shifting No. 2	33366-35050	Pc	1
Gear Box Ring shaft snap	90520-30018	Pc	1
Gear Box Ring shaft snap	90520-30019	Pc	1
Gear Box Ring shaft snap	90520-30020	Pc	1
Gear Box Ring Set Synchronizer Shifting No.1 HZJ	33368-35070	Pc	1
Gear Box Ring Sycroniser Shifting No.2	33368-35050	Pc	1
Gear Box Ring Synchronizer No.2 HZJ	33368-35030	Pc	1

Gear Box Ring Synchronizer No.2 HZJ	33368-35040	Pc	1
Gear Box Ring Synchronizer	33384-60090	Pc	1
Gear Box Ring Synchronizer Outer No. 3	33384-35011	Pc	1
Gear Box Shifting Fork NO.1	33212-35032	Pc	1
Gear Box Shifting Fork NO.2	33213-35040	Pc	1
Gear Box Shifting Fork NO.3	33230-35012	Pc	1
Gear Box Sleeve HubTransmission	33364-35050	Pc	1
Gear Box Sleeve HubTransmission Hub No. 3	33395-35031	Pc	1
Gear Box Spring Compression	90501-07104	Pc	1
Gear Box Spring Compression	90501-08212	Pc	1
Gear Box SpringSynch Shift Key	33366-35030	Pc	1
Gear Box Shaft Sub-Assy	33301-60120 / 33301-35090	Pc	1
Gear Box Sleeve Transmission Hub NO.2	33364-60070	Pc	1
Gear BoxSpringSynch Shift Key	33391-25030	Pc	1
Gear Counter	33421-26110 / 33421-71011	Pc	1
Gear Kit Differential RR	41039-34060	Pc	1
Gear Power Take Off Driver	36215-60030	Pc	1
Gear Set - Reverse	33331-60H01	Pc	1
Gear Sub Assy - Reverse Ider	33402-35060	Pc	1
Gear Sub-Assy, 1st	33032-60111	Pc	1
Gear Sub-Assy, 2rd	33033-60050	Pc	1
Gear Sub-Assy, 3rd	33034-60030	Pc	1
Gear Transfer Input	36212-60120	Pc	1
Glass Side Window RR RH	62211-60090	Pc	1
Glass Side Window RR RH	62211-60080	Pc	1
Glass Side Window RR RH	62213-60010	Pc	1
Glass Side Window RR LH	62221-60020	Pc	1
Glass Quart Wind FR LH	62712-60360	Pc	1
Glass Quart Wind FR RH	62711-60430	Pc	1
Glass Quart Wind RR LH	62714-60160	Pc	1
Glass Quart Wind RR RH	62713-60170	Pc	1
Glass Quarter FR Door LH	69320-60070	Pc	1
Glass Quarter FR Door RH	69310-60070	Pc	1
Glass Quarter RR Door LH	62714-60170	Pc	1
Glass Side Wind RR LH	62223-60010	Pc	1
Glass Back Door RH	68131-60370	Pc	1
Glass Wind Shield	56111-60220	Pc	1
Glass Wind Shield	56111-60A90	Pc	1
Glass Wind Shield (Prado LJ 150)	56101-60170	Pc	1
Glass WindShield (Hilux LN 166)	56111-35042	Pc	1
Glass Wind Shield(Hilux Kun/Lan25)	56101-0K060	Pc	1
Glass ZJ17mm AFHX(Prado 120)	56111-60451	Pc	1
Grill Sub Assy	53101-60450	Pc	1
Grill Sub Assy	53101-60461	Pc	1
Hand BrakeCable(HZJ 71)	46410-60860	Pc	1
Hand BrakeCable(HZJ 76)	46410-60A10	Pc	1
Hand BrakeCable(HZJ 76)	46410-60A20	Pc	1
Hand BrakeCable(HZJ 78)	46410-60840	Pc	1
Hand BrakeCable(HZJ 79)	46410-60A30	Pc	1
Handle Assy FR Door Outside LH	69220-90K00	Pc	1

Handle Assy FR Door Outside RH	69210-90K00	Pc	1
Handle Sub Assy FR -Door inside LH	69206-10040-B6	Pc	1
Handle Sub Assy FR -Door inside RH	69205-10040-B7	Pc	1
Head Lamp Assy LH	81150-90K01	Pc	1
Head Lamp Assy RH	81110-90K01	Pc	1
Head Lamp LH	81150-35240	Pc	1
Head Lamp RH	81110-35260	Pc	1
Hinge Assy,FR Door	68720-22071	Pc	1
Hinge Assy,FR Door	68710-22081	Pc	1
Holder & Nozzle	23600-19035	Pc	1
Holder Assy -Alternator Brush	27370-75060	Pc	1
Holder Assy -Starter Brush	28140-77090	Pc	1
Holder -Clutch Pedal Spring	31353-26010	Pc	1
Holder S/A Rectifier	27357-55080	Pc	1
Horn	86520-12610	Pc	1
Horn	86510-12420	Pc	1
Hose 2 way -Transmission Breather	36149-60070	Pc	1
Hose Fuel - Main Tube No.2	95332-10030		1
Hose Radiator No 1	16571-17020	Pc	1
Hose Radiator No 2	16572-17150	Pc	1
Hose,Cool Air	52831-60050	Pc	1
Housing Assy Fr Axle	43110-60361	Pc	1
Housing Assy Fr Axle	43110-60320		1
Housing Assy Rr Axle	42110-60A10	Pc	1
Hub & Bearing Assy RR Axle RH	42410-69025 / 42410-69026	Pc	1
Hub & Brake Drum	42420-69016	Pc	1
Hub Assy Wheel	43530-60130	Pc	1
Hub Sub Assy FR	43502-69046	Pc	1
Hub Sub Assy FR	43502-60201	Pc	1
Hub Sub Assy -FR Axle RH	43502-69087	Pc	1
Idle Pulley	88440-60040	Pc	1
Idle Pulley	88440-35010	Pc	1
Idler Sub Assy -Timing Belt NO. 1	13505-17020		1
Injector Fuel Pump	22100-1C050	Pc	1
Insulator Engine	12371-17080	Pc	1
Insultor Engine Mounting FR	12361-17020	Pc	1
Key - For Drive Gear	90099-13018	Pc	1
Knuckle Bearings	90366-20003	Pc	1
Knuckle steering LHS	43212-60111	Pc	1
Knuckle steering RHS	43211-60111	Pc	1
Lamp assy FR	81560-60331	Pc	1
Lamp assy RR	81550-60411	Pc	1
Lamp Assy RR Combination	81560-60342	Pc	1
Lamp Assy Side Turn	81730-20192	Pc	1
Leaf RR Spring No. 1	48205-6A020	Pc	1
Leaf RR Spring No. 1	48216-6A080	Pc	1
Leaf RR Spring No. 1	48031-60140	Pc	1
Leaf RR Spring No. 1	48201-6A120	Pc	1
Leaf RR Spring No. 2	48212-6A110	Pc	1
Leaf Spring Second Leaf RH	48202-60A60	Pc	1



Lense RR Combination LH	81561-90K09	Pc	1
Lense RR Combination RH	81551-90K09	Pc	1
Lense / Body RR	81561-60460	Pc	1
Lense / Body RR	81551-60540	Pc	1
Lense / Body RR Combination	81561-60300	Pc	1
Lense / Body RR Combination	81551-60380	Pc	1
Lense RR Combination	81561-60381	Pc	1
Lense RR Combination	81551-60451	Pc	1
Lever Parking BRK LH	47612-35040	Pc	1
Lever Parking BRK RH	47611-35040	Pc	1
Link Assy Front	48820-42030	Pc	1
Link Sub Assy	48802-60110	Pc	1
Link Sub Assy	48802-60090	Pc	1
Link Sub Assy Fr Stab	48802-60120	Pc	1
Lock Assy Back Door	69350-90K00	Pc	1
Lock Assy Front Door LH	69320-60070	Pc	1
Lock Assy Front Door RH	69310-60070	Pc	1
Lock Assy Hood	53630-60030	Pc	1
Lock Assy Hood	53630-60031	Pc	1
Lock Assy Hood	53510-60230	Pc	1
Lock Assy Side	62910-60040	Pc	1
Main Shaft Steering	45220-60101	Pc	1
Master Switch Assy	84040-33100	Pc	1
Member Sub-Assy, FR	53705-60060	Pc	1
Mini Fuse 20 AM	8JS728596-161	Pc	1
Mini Fuse 25 AM	8JS728596-091	Pc	1
Mini Fuse 30 AM	8JS728596-171	Pc	1
Mirror Assy Outer	87910-60152	Pc	1
Mirror Assy Outer	87910-60F10	Pc	1
Mirror Assy Outer	87940-60372	Pc	1
Mirror Assy Outer	87940-60600	Pc	1
Mirror Assy Outer	87910-60680	Pc	1
Mirror Assy Outer	87910-60142	Pc	1
Motor Assy Power	85710-60181 / 85710-60182	Pc	1
Mud Guard Sub Assy Fr- LH	76607-60270	Pc	1
Mud Guard Sub Assy quarter panel RR RH	76607-60290	Pc	1
Mudguard Sub-Assy	76621-60110	Pc	1
Mudguard Sub-Assy	76622-60100	Pc	1
Nozzle Assy	23620-19105	Pc	1
Nozzle Assy	23620-69045	Pc	1
Nut RR Drive Pinion	90179-22029	Pc	1
Nut Body Mounting	94184-01001	Pc	1
Nut Hub	90942-01101	Pc	1
Nut Manual Transmission Out Put Shaft RR Set	90179-26004	Pc	1
Nut RR Axle Bearing Lock	42427-60021	Pc	1
Nut RR Spring U Bolt	90179-14023	Pc	1
Nut Flange	90178-10006	Pc	1
Mudguard Sud-Assy	76608-60290	Pc	1
Nuts FR Wheel	43521-60020	Pc	1
Nuts FR Wheel Adjusting	43521-60011	Pc	1

Oil Cooler -Cover	15721-17012	Pc	1
Oil Cooler -Gasket	15785-66010	Pc	1
Oil Filters	90915-30002-8T	Pc	1
O-Rings (Vane Pump)	90301-60002	Pc	1
O-Ring (Water Pump)	90301-37005	Pc	1
Packing	62792-95A00	Pc	1
Pad Kit Brake(FR)	04465-60340 / 04465-60250	Pc	1
Pad Kit Disc Brake	04465-YZZ57	Pc	1
Pad RR Bumper, LH	52164-60011	Pc	1
Pad RR Bumper, RH	52462-60021	Pc	1
Panel Cab back,Upper	64111-60020	Pc	1
Panel Sub Assy,Fr Door Trim LH	67620-60B90-B1	Pc	1
Panel Sub Assy,Fr Door Trim RH	67610-60C10-B1	Pc	1
Panel Roof	63111-60740	Pc	1
Panel Sub -ASSY FR	67001-60501	Pc	1
Piece Gear Spline NO.1	33318-35040	Pc	1
Pin Clutch Member Thrust Washer Stop	90250-05202	Pc	1
Pin Kit Rr Spring	04484-60110	Pc	1
Pin W/Hole-RR Brake	90249-08068	Pc	1
Pin Shoe Down RR Brake	47447-60010	Pc	1
Pipe Fuel For Fuel Filter to Injection Pump	23811-17010	Pc	1
Pipe Nozzle	23761-17010	Pc	1
Plate	62249-95700	Pc	1
Plate, RR Bumper,LH	52164-60070	Pc	1
Plate, RR Bumper,RH	52163-60081	Pc	1
Plate,RR Bumper,	52162-60030	Pc	1
Plug RR Axle Housing Drain	90341-18040	Pc	1
Plug Sub Assy, Drain	90341-18006	Pc	1
Plug Hole For RR Brake	47492-28010	Pc	1
Plug Adj- Hole	47491-20011	Pc	1
Plug Assy,Glow	19850-17020	Pc	1
Plug -Fuel Filter drain	23388-64470	Pc	1
Motor Assy Power Window Regulator RR RH	85710-60120	Pc	1
Precleaner Asst Air	17730-66020	Pc	1
Precleaner Asst Air	17730-66010	Pc	1
Precleaner Assy Air W / Hose	17730-61010	Pc	1
Pump Assy Injection Or Supply	22100-1C380	Pc	1
Pump Assy Injection Or Supply	22100-1C201	Pc	1
Pump Assy Vane	44320-60220	Pc	1
Pump Assy Vane	44310-35500	Pc	1
Pump Assy Vane	44310-60450	Pc	1
Pump Assy Water	16100-19235	Pc	1
Radiator Assy	16400-17300	Pc	1
Radiator Assy	16400-17400	Pc	1
Rear Axle Shaft	42311-60200	Pc	1
Reciever Transfer Oil -Transfer Idler Gear	36119-60040	Pc	1
Regulator Assy-Generator	27700-50030	Pc	1
Relay	90987-02027	Pc	1
Relay Assy (Glow plug)	28610-57100	Pc	1
Relay Assy (Starter)	28300-54110	pc	1

Relay Assy (Glow Plug)	28601-17020	Pc	1
Relay Assy (Glow Plug)	28610-27010	Pc	1
Relay Defogger	90987-02004	Pc	1
Relay for Headlamp (main)	90987-02006	Pc	1
Relay Light Control	90987-01003	Pc	1
Relay Radiator Fan	90987-03001	Pc	1
Relay Heater	90987-02025	Pc	1
Retainer	62793-95704	Pc	1
Retainer	90948-02173	Pc	1
Retainer Cushion -FR Shock Absorber No. 1	90948-02141	Pc	1
Retainer Cushion No. 2- Fr Shock Absorber	90948-02144	Pc	1
Retainer Cushion -Stabilizer Bar No.1	90948-02126	Pc	1
Retainer Sub Assy	48509-60040	Pc	1
Ring - Shaft Snap For Bearing	90520-36007	Pc	1
Ring (For Rear Brake)	96160-00500	Pc	1
Ring Counter Gear Fr Bearing Snap- NO .1	90520-56002	Pc	1
Ring Counter Gear Fr Bearing Snap- NO .2	90520-23057	Pc	1
Ring Hole Snap	90521-34005	Pc	1
Ring O -Transfer Idler Shaft	90301-34004	Pc	1
Ring O -Transfer Input Gear	90301-34005	Pc	1
Ring Set -Piston	13011-17030	Pc	1
Ring -Shaft Snap Transmission Clutch Hub No.3	90520-30014	Pc	1
Ring Shaft Snap-For FR Bearing	90520-88001	Pc	1
Retainer Front Door	67867-12150	Pc	1
Ring Snap	90520-31006	Pc	1
Ring Snap	90520-22022	Pc	1
Rod Assy -High & Low Shift No. 2	36340-60100		1
Rod Assy Steering Relay	45450-69255	Pc	1
Plate Guide	23368-51020	pc	1
Reservoir Assy Oil	44360-60101	Pc	1
Room Lamp Group	81250-60050	Pc	1
Rotor Head (Fuel Injection Pump)	22140-17810	Pc	1
Rubber Wiper Blade	85214-48031	Pc	1
Rubber Wiper Blade	85214-48010	Pc	1
Run Quarter Window	62755-60030	Pc	1
Run Quarter Window	62756-60030	Pc	1
Run Side Widow LH	62481-60010	Pc	1
Run Side Widow RH	62471-60320	Pc	1
Safety Pad Instrumental Panel- TLC 100	55401-60220-E0	Pc	1
Screw	90164-40050	Pc	1
Screw - Over Flow	22569-17140	Pc	1
Screw -RR Axle Bearing Lock Nut	42419-60011	Pc	1
Support Fuel Sub Tank RH	77133-60101	Pc	1
Seal Oil- For Transmission FR Bearing Retainer	90311-32012	Pc	1
Seal Oil -FR Drive Shaft RH	90311-47013	Pc	1
Seal Oil -Outer Shaft Retainer	90311-48023	Pc	1
Seal Oil -Transfer Case	90311-32022	Pc	1
Seal O Ring -Valve Stem Oil	90913-02094	Pc	1
Seal Sub Assy(Knucle Gasket)	43204-60032	Kits	1
Seal -Type T Oil FR Drive Shaft	90316-48003	Pc	1

Sealed Beam	90981-01046	Pc	1
Seals (FR Axle)	90310-35010	Pc	1
Seals (Dust FR)	90313-93003	Pc	1
Seals (Dust RR )	90313-93001	Pc	1
Seals (Oil Diff FR)	90311-41009	Pc	1
Seals (RR Axle)	90310-36003	Pc	1
Seals(Hub FR , RR)	90311-62001	Pc	1
Seals(Oil Diff RR)	90311-45028	Pc	1
Seals Kit	04434-60031	Kits	1
Seat Sub Assy RR Spring LH	48047-60090	Pc	1
Seat Sub Assy RR Spring RH	48046-60100	Pc	1
Seat Sub Assy -Spring U -Bolt -LH	48047-60080 / 48047-60090	Pc	1
Seat Sub Assy -Spring U -Bolt -RH	48046-60090 / 48046-60100	Pc	1
Shackle Kit RR Spring	04483-60200	Pc	1
Shackle Kit RR Spring	04483-60130 / 04483-60200	Pc	1
Shaft Assy - Propeller	37110-6A260	Pc	1
Shaft Assy FR Drive	43430-35023	Pc	1
Shaft Assy Propeller Front	37140-60540	Pc	1
Shaft Assy -Propeller Front	37140-35190	Pc	1
Shaft Assy Steering Intermediate No. 2	45260-60100	Pc	1
Shaft FR Axle Inner	43412-60140	Pc	1
Shaft -FR Axle Inner LH	43412-60120	Pc	1
Shaft -FR Axle Inner RH	43411-60100	Pc	1
Shaft Sub assy Front Axle	43405-60100	Pc	1
Shaft Sub assy Front Axle	43405-60120	Pc	1
Shaft -Transfer Input	36211-60021	Pc	1
Shim Kit	04946-30100	Pc	1
Shim Kit Anti squeal	04945-60030	Pc	1
Shim Steer Knuckle	43233-60011	Pc	1
Shoe Kit/Brake Shoes	04495-60070	Pc	1
Shroud Fan	16711-17150	Pc	1
Silencer Back Door Lock Link	69759-90K00	Pc	1
Shim Steering Knucle Adjust NO. 1	43235-60010	Pc	1
Spacer	90560-10101	Pc	1
Spacer Stab Bar Fr	90560-10044	Pc	1
Spacer Stab Bar Rr	90560-10275	Pc	1
Spider kit -RR Propeller Shaft	04371-36050	Pc	1
Spider kit -FR Propeller Shaft	04371-60060	Pc	1
Spider kit -FR Propeller Shaft	04371-60070	Pc	1
Spider Sub Assy FR Differencial	41306-60020	Pc	1
Spindle Sub Assy	43401-60081 / 43401-60080	Pc	1
Spindle Sub Assy (Free Wheel Hub)	43401-60110	Pc	1
Spindle Sub Assy (HZJ 78,76,79)	43401-60100	Pc	1
Spindle Sub Assy (Pick Up,HZJ 78)	43401-60091	Pc	1
Spring	90501-20002	Pc	1
Spring Assy Hollow	48310-60111	Pc	1
Spring Assy Hollow	48310-60101	Pc	1
Spring Assy RR LH-HZJ76	48210-60B50	Pc	1
Spring Assy RR RH-HZJ76	48210-60B40	Pc	1
Spring Assy RR RH-HZJ79	48210-60B80	Set	1

Spring Assy RR RH-HZJ80	48210-60C00	Pc	1
Spring Compression -For Turn Over Spring Seat	90949-03150	Pc	1
Spring -Fr Coil RH	48131-6B320	Pc	1
Spring -Fr Coil RH	48131-6B340	Pc	1
Spring -Leaf NO.3	48213-60A60	Pc	1
Spring -Parking Brake Bell Crack Return	90506-20033	Pc	1
Spring -RR Brake Shoe Hold Down	90501-20012	Pc	1
Spring -RR Brake Shoe Return	90506-18031	Pc	1
Spring -RR Leaf No. 7	48217-60B60	Set	1
Spring -RR Leaf No. 7	48210-60B70	Set	1
Spring -Tension RR Brake Automatic Adjuster	90506-12031	Pc	1
Starter Assy	28100-17091	Pc	1
Stay / RR BPR S1, LH	52088-60010	Pc	1
Stays / RR BPR S1, RH	52087-60010	Pc	1
Step - RR Bumper	52351-60070	Pc	1
Strut Set LH	47062-60020	Pc	1
Strut Set RH	47061-60030	Pc	1
Support RR Bumper S1	52155-60050	Pc	1
Support Battery Tray No.3	74435-90K02	Pc	1
Support Release Fork	31263-35030	Pc	1
Switch Assy -Ignition or Starter	84450-60261	Pc	1
Switch Level	84461-35060	Pc	1
Switch Transfer Indicator No. 1	84222-60022	Pc	1
Switch Transmission Control	84722-60050	Pc	1
Tank Sub Assy,Fuel	77001-60552	Pc	1
Tapered Bearings	90366-50054	Pc	1
Terminal Assy	90982-06024	Pc	1
Terminal Junction +	82675-60030	Pc	1
Timer Preheating	28521-17190	Pc	1
Timing Belt	13568-19195	Pc	1
Transfer Assy	36110-6E202	Pc	1
Transmission Wire	82125-60620	Pc	1
Transmition Unit Assy Manuel	33030-6A411	Pc	1
Tube Assy -Fuel Suction	77240-60490	Pc	1
U Bolts	90117-14052	Pc	1
U Bolts	90117-14181	Pc	1
Unit Assy / Head Lamp LH	81170-60C10	Pc	1
Unit Assy / Head Lamp RH	81130-60C50	Pc	1
Unit Assy /Head Lamp (HZJ 76,78,79) L H	81170-60C20	Pc	1
Unit Assy /Head Lamp RH	81130-60C40	Pc	1
V Belt	99332-11260-8T	Pc	1
Valve Assy Fuel Tank Solenoid Main	77720-60130	Pc	1
Valve Assy Fuel Tank Solenoid Main	77710-60140	Pc	1
Valve Assy Fuel Tank Solenoid Main	77710-60160	Pc	1
Valve Assy Fuel Tank Solenoid Main	77720-60110	Pc	1
Valve Gasket Set	04112-17160 / 04112-17110	Pc	1
Valve Springs inlet	90504-49001	Pc	1
Valve Sub Assy -Injection Pump Delivery	22104-17010	Pc	1
Valves Cylinder head Exhaust	13715-54040	Pc	1
Valves Cylinder head Inlet	13711-17010	Pc	1

Weatherstrip	56121-60120	Pc	1
Washer RR Differential Pinion Thrust	41351-60010	Pc	1
Washer -Type C for Parking Brake Shoe	90213-07010	Pc	1
Washers Claw for steering Knuckle	90214-42030	Pc	1
Washers FR Wheel Adjust Lock	90215-42025	Pc	1
Weather Strip,Back	67882-60041	Pc	1
Weather Strip,Back DR	67881-60040	Pc	1
Weatherstrip	56121-60140	Pc	1
Weatherstrip	68160-90K00	Pc	1
Wheel Assy Rim	42610-60320	Pc	1
Washers	42323-60030	Pc	1
Wire Rear Brake Shoes	47616-35030	Pc	1
Pad Kit	04465-60080 / 04465-60100	Pc	1
Pump Assy Vane -(HZJ 105)	44320-60171	Pc	1
Holder & Nozzle Set	23600-19075	Pc	1
Shoe Assy Parking Brake RH - No. 1	46540-60050	Pc	1
Shoe Assy Parking Brake LH - No. 1	46580-60050	Pc	1
Ring Snap	90520-31005	Pc	1
Pump Sub Assy Fuel Feed	22505-54010	Pc	1
Switch Assy -Back Up lamp (Reverse Switch)	84210-12040 / 84210-52050	Pc	1
Clip FR Door Weather Strip	67869-30020	Pc	1
Pad kit (Toyota L/C 100 Series)	04466-60040	Pc	1
Frame Sub Assy -Quarter Window LH	62706-60050	Pc	1
Shim Kit FR Disc	04945-35120	Set	1
Support Clutch fork release	31236-35030	Pc	1
Plate (Rear Axle Lock Nut LH RH)	42428-60011	Pc	1
Hinge Sub Assy Back	68804-60060	Pc	1
Hinge Sub Assy Back	68802-60060	Pc	1
Hinge Sub Assy Back	68803-60040	Pc	1
Hinge Sub Assy Back	68801-60060	Pc	1
Seal Oil- For Out Put Shaft Bearing shaft retainer	90311-48022	Pc	1
Bush	48706-60040	Pc	1
Bumper Hood FR	53382-60030	Pcs	1
Bush	48702-60031	Pc	1
Bush	90389-14037	Pc	1
Bush	48702-60040	Pc	1
Weather Strip FR	67862-60101	Pc	1
Weather Strip FR	67861-60101	Pc	1
Weather Strip Back	67881-60101	Pc	1
Weather Strip RR	67867-60080	Pc	1
Weather Strip Back	67882-60080	Pc	1
Weather Strip RR	67871-60080	Pc	1
Plate	46504-60091	Pc	1
Master Switch Assy , Power window Regulator	84820-35010	Pc	1
Speedometer Sensor	83181-20040	Pc	1
Shaft Out-Put	33321-35140 / 33321-35141	Pc	1
Gear Box Sleeve Transmission Hub NO.3	33395-60050	Pc	1
Front Axle Breather Plug	90930-03097	Pc	1
Fuel Suction Tube Assy	77240-60500	Pc	1
Vane Pump Oil Reservoir Cap Sub Assy	44305-22060	Pc	1

Weather Strip Back Door	67883-60010	Pc	1
Weather Strip Back Door	67882-60050	Pc	1
Door master switch assy	84040-60220	Pc	1
Cover Sub Assy Disc Brake	47781-60100	Pc	1
Bonnet locks	53510-60071 / 53510-60230	Pc	1
Leaf Spring No1 Rear	48201-6A020	Pc	1
Leaf Spring No2 Rear	48212-6A020	Pc	1
Master Switch Assy , Power window Regulator	84040-60091	Pc	1
Seal Oil OutPut Shaft Retainer	90311-48010	Pc	1
Case Filter	23382-51031	Pc	1
Cylinder Set Lock	69005-60B20	Pc	1
Washer	90948-03024	Pc	1
Band Fuel Tank LH	77602-60100	Pc	1
Band Fuel Tank RH	77601-60230	Pc	1
Boad Sub Assy Door Trip LH	62313-60080-B1	Pc	1
Bush Sub Assy Trailing Arm No. 1	48702-60060	Pc	1
Cap Steering Knucle	43232-60031	Pc	1
Cover FR Seat Cusion	71071-60332-B1	Pc	1
Gasket Knucle Spindle	43435-60020	Pc	1
Lens RR Combination RH	81550-60422	Pc	1
Shaft Assy Propeller	37110-6A250	Pc	1
Tube Sub Assy -Fuel Tank Vent	77017-60410	Pc	1
Washer Set CrankShaft Thrust HZJ7	11011-17010	Set	1
Rod Sub Assy Coonecting HZJ7	13201-17010	Pc	1
Bearing Set Connecting Rod -U/S 0.25	13204-17011	Pc	1
Gear Sub Assy - 3rd	33034-60090	Pc	1
Spring Assy RR RH - HZJ78 (8 Leaf)	48210-60B60	Set	1
Tank Sub Assy,Fuel	77001-60781	Pc	1
Pipe Sub Assy	17401-17240	Pc	1
Exhaust Pipe	17403-17070	Pc	1
Pipe	17405-17073	Pc	1
Valve Expansion	88515-12090	Pc	1
5 <sup>th</sup> gear	33336-35100	Pc	1
Final Gear Kit Differential RR	41201-80493	Pc	1
Final Gear Kit Differential RR	41201-69815	Pc	1
Gear Sub Assy - Reverse Idler	33402-60030	Pc	1
Timing Cover FR	11321-17040	Pc	1
Washer - Steering Knucle Arm	42323-60020	Pc	1
Bolt - Leading Arm	90119-16003	Pc	1
Nut - Steering Knucle Arm	90201-12019	Pc	1
Nut RR Axle Shaft	90201-10075	Pc	1
Nut - FR Differential	90170-08204	Pc	1
Motor Assy Power Window Regulator FR LH	85720-60120	Pc	1
Mirror Assy Outer RR rear LH	87940-60C90	Pc	1
Fuel Filters	FS1001	Pc	1
Bulbs For License Plate Lamp 12V 5W	99132-12050	Pc	1
Cylinder Assy Disc Brake LH	47750-60120	Pc	1
Ring Disc Wheel Side	42613-60080	Pc	1
Gasket Kit Front Axle Overhaul	04434-60050	Pc	1
Cap Assy Fuel Tank	77310-60100	Pc	1

U Bolts	90117-14073	Pc	1
U Bolt Nuts	90178-14009	Pc	1
Startor Sub Assy Complete	28011-17090	Pc	1
Ring Snap	90520-31010	Pc	1
RR Differential Sub Assy Complete	41110-60A61	Pc	1
WeatherStrip Back Door No. 2	67882-60031	Pc	1
Cushion Exhaust Tail Pipe For Center	17567-17010	Pc	1
Ring Synchronizer	33368-35080/33368-35050	Pc	1
Shim Steering Knucle Adjust NO. 1	43233-60030	Pc	1
Shim Steering Knucle Adjust NO. 1	43234-60020	Pc	1
Shim Steering Knucle Adjust NO. 1	43235-60020	Pc	1
Shim Steering Knucle Adjust NO. 1	43236-60020	Pc	1
Oil Seal For Transfer FR Drive Shift Shaft	90311-22005	Pc	1
Oil Seal For Shift Lever Shaft	90313-13001	Pc	1
Ball Shaft Detent	90360-10003	Pc	1
Bearing Radial Ball For Transfer In put Shaft FR	90363-35020	Pc	1
Bearing Radial Ball For Transfer In put Gear	90363-35013	Pc	1
Bearing For Out Put Shaft Center	90363-35039	Pc	1
Bearing Needle Roller For Transfer Out Put Shaft F	90364-17010	Pc	1
Bearing Taper Roller For Transfer Out Put Shaft	90366-35011	Pc	1
Bearing Taper Roller For Transfer Out Put Shaft	90366-35053	Pc	1
Bush	90385-08001	Pc	1
Mud Guard	76607-60271	Pc	1
Bumper Sub Assy RR RH	52106-60141	Pc	1
Duct Sub Assy Cool	53207-60070	Pc	1
Hinge Assy FR Door Upper RH	68710-60040	Pc	1
Hinge Assy FR Door Upper LH	68720-60040	Pc	1
Hinge Assy FR Door Lower RH	68730-60020	Pc	1
Hinge Assy FR Door Lower LH	68740-60020	Pc	1
Hinge Assy RR Door Upper RH	68750-60040	Pc	1
Hinge Assy RR Door Upper LH	68760-60040	Pc	1
Antenna Assy W/Holder	86300-60310	Pc	1
Antenna Assy W/Holder	86300-60690	Pc	1